

Henchman 250/175 Litre Barrow Trailer - Assembly & User Guide


A: Safety in use

Whilst every effort has been made to design a safe Barrow Trailer, please be aware of the possible risks in using any Barrow or Trailer to move heavy materials. Non specifically, the risks include injury from heavy lifting, falling objects, the use of garden tools and the use of vehicles for towing. Do not proceed with any job unless the risks are understood and you have taken all sensible measures to minimise them. Do not allow children or others use of the Barrow Trailer if they are not confident and experienced in the task; and aware and accepting of the risks. If you would like to discuss any specific concerns regarding the safe use of a Henchman Barrow Trailer please contact Henchman and speak with the company managing director before proceeding. 01635 299847 or info@henchman.co.uk

B: Assembly

Tools required: Two 10mm spanners.

1. Remove all packaging and lay out all barrow components in order to clearly identify each part from the pictures in this assembly guide. If you have any parts missing, please call Henchman on 01635 299847.
2. Separate the plastic tub from the common frame.
3. Feed the end of the leg with the drilled hole running front to back, into the bottom of the square block on the handle frame which is shown by arrow **A** in the photo 1. Using the smaller bolt, line up the hole in the end of the leg, with the hole on square block.
4. Feed the smaller bolt into the hole from the handle side of the square block and fasten on the other side using a lock nut as shown in photo 2.
5. Identify the large hook shaped bolt. Remove lock nut and spring. Feed the hook shaped bolt through the hole shown by arrow **B** in photo 1 from the handle side on the square block. Slide the spring back on to the hook bolt from the threaded end and fasten with a lock nut as shown in photo 2. Only screw the lock nut on a few turns or until the lock nut engages. You should now be able pull and relocate the hook bolt in the hole immediately to the left and/or the hole immediately below from the handle side.

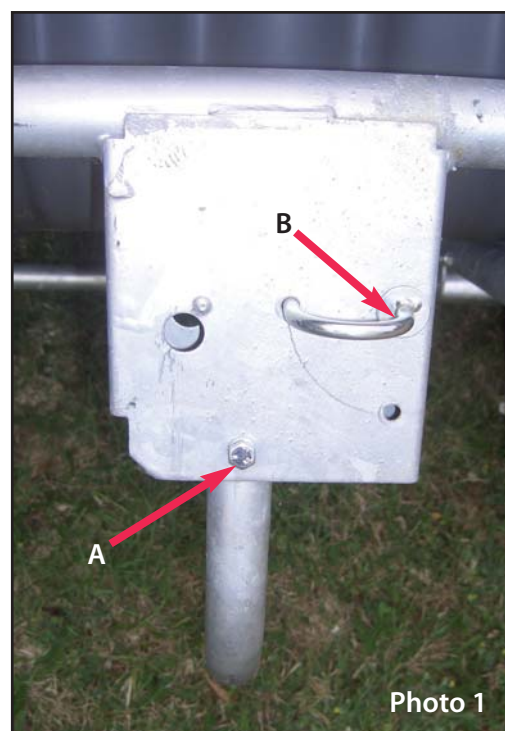

visit: www.henchman.co.uk
email: info@henchman.co.uk
or call: 01635 299 847

Tough tasks made easy
HENCHMAN[®]

6. Assemble the removable axle - starting with the common frame, position the end with the four bolt holes closest to you and slide the axle into the left hand axle bracket on the common frame, identifying that the positioning of the welded tubular bracket on the axle is slightly off centre to the right.
7. Feed the axle through the left hand axle bracket until you are able to feed the other end of the axle through the right hand axle bracket on the other side of the common frame.
8. Feed the other end of the leg attached to the handle frame into the welded tubular bracket positioned on the top side of the axle.
9. Line up the 4 bolt holes on the common frame with the 4 bolts holes on the handle frame. Insert the long bolt through the 2 holes nearest the handle first followed by the two holes nearest the axle. Please ensure the lock nuts are tight so the 2 frames are firmly secured together.
10. Slide the long spacer - the 6" long silver tube - over one end of the axle. Attach the wheel onto the axle - the tyre valve faces out from the frame. Add the wheel washer and secure with the large "R" clip. Repeat this process with the other spacer and wheel on the other side of the Barrow.
11. Finally place the tub in the frame, with the word 'Henchman' at the handle end and fix using the rubber latches at either end.




C: Converting from Barrow to Trailer.

1. The draw bars – either 'ball and hitch' or a 'jaw' connection are sold separately to the barrows.
2. Remove all packaging and the large "R" clips attached to both forks of the draw bar. Slide the forks in between the tub and wheel on either side of the barrow and locate over the tube spacers on the axle. Fasten by feeding the large "R" clips through both holes on each fork, now behind the axle.
3. Pull the hook bolt out, folding the leg away. Locate the hook bolt in the hole immediately below which will secure the leg in the folded position.
4. Attach the other end of the draw bar to the back of tractor.
5. To convert trailer to barrow, reverse this process.

**For further assistance contact Henchman on
01635 299847, info@henchman.co.uk**

Barrow Components Check List

Common Frame

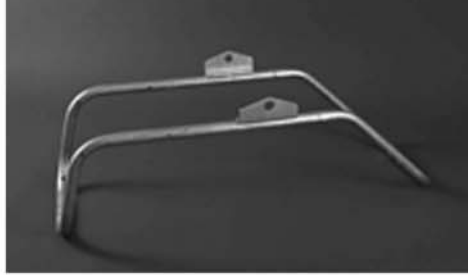

R Clip



Handle Frame




Axle



Hook Bolt



Small Bolt and Lock Nut

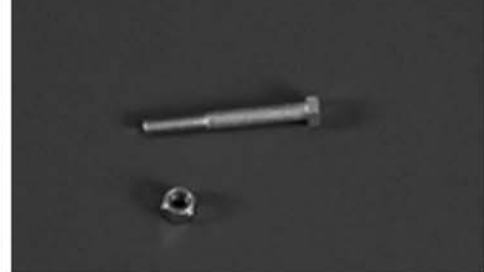


Large Bolts and Lock Nuts



Spacers



Leg

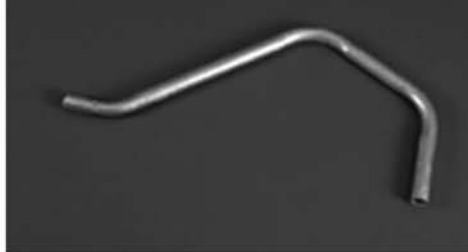

Wheel Washers



Wheel

